

TECH BULLETIN

TEK-B10

1983-1988 FORD F250/350 High Pedal Effort

Clutch Kits: 07-022, 07-065, 07-080, 07-080-CB & 07-080-SB

Ford Suggests Lubricating the release bearing at every oil change interval as described below:

1. Remove clutch hydraulic slave cylinder from the transmission bell housing.
2. Remove the releaser lever and rubber shield from the bell housing.
3. Using a long screwdriver, apply small amount high quality multi-purpose grease (do not use anti-seize) to the bearing retainer trough the bell housing opening.
4. Slide the release bearing on the retainer to spread the lubricant evenly.

WARNING – It is critical that you **do not** apply an excessive amount of lubricant in order to avoid contaminating the friction material on the disc and voiding any warranty. Use only approved lubricants - Do not use anti-seize or similar type products